


42-1 Anti-lock Brake System (ABS)/Traction Assist

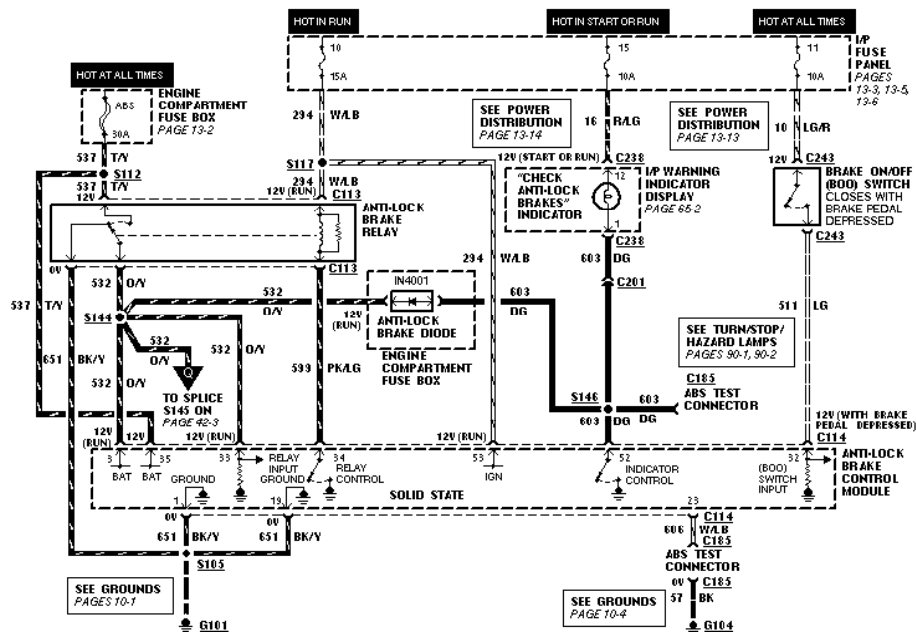

➔ Component

➔ Connector


➔ Ground

➔ Splice

➔ Page

➔ Harness

42-2 Anti-lock Brake System (ABS)/Traction Assist

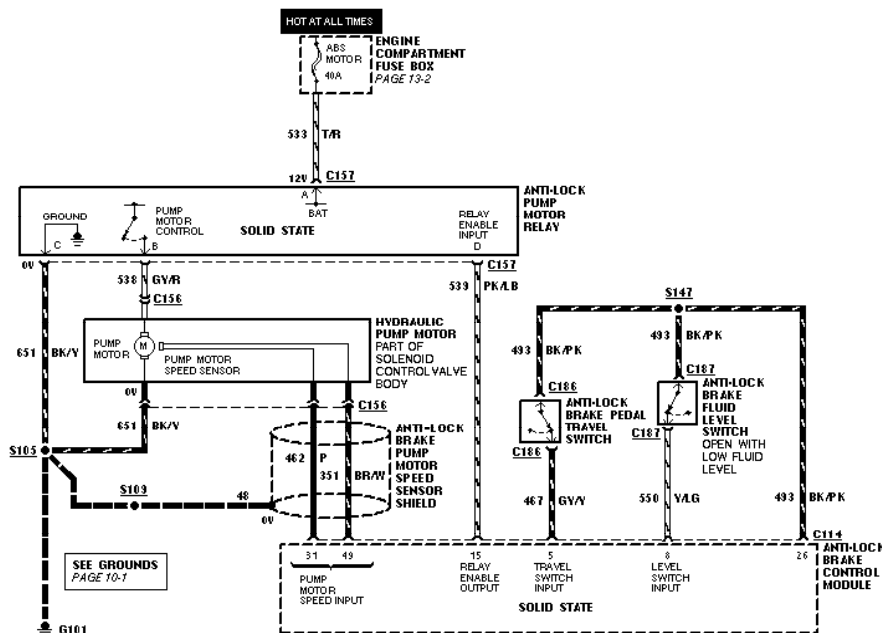

➔ Component

➔ Connector


➔ Ground

➔ Splice

➔ Page


➔ Harness

42-3 Anti-lock Brake System (ABS)/Traction Assist

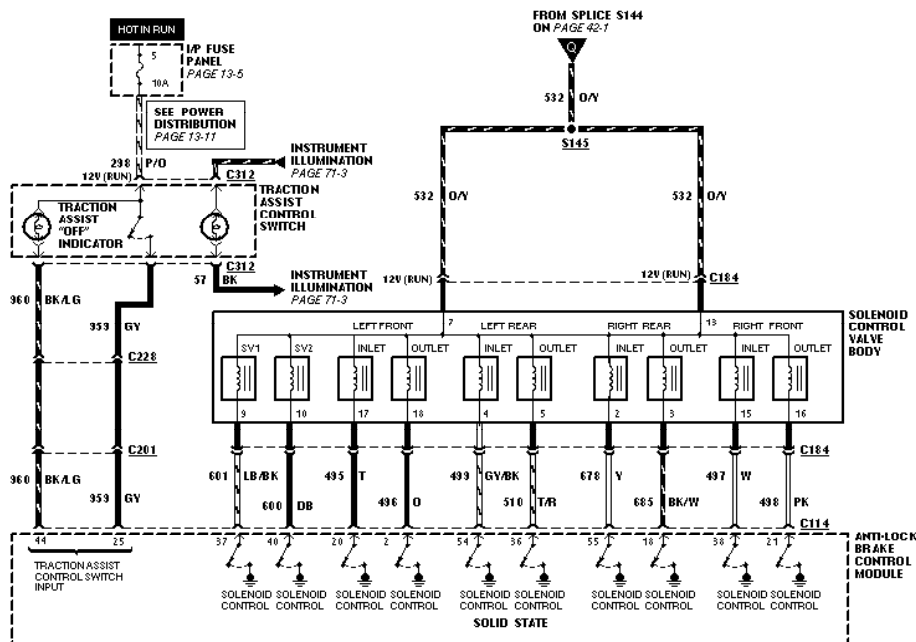

- ➔ Component
- ➔ Connector
- ➔ Splice
- ➔ Page
- ➔ Harness


42-4 Anti-lock Brake System (ABS)/Traction Assist

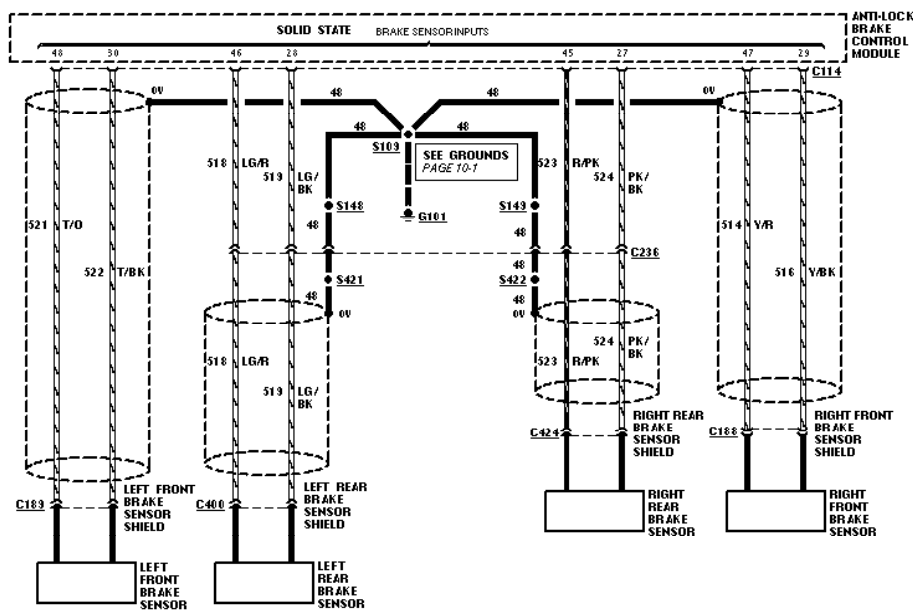

- ➔ Component
- ➔ Connector
- ➔ Ground
- ➔ Splice
- ➔ Page
- ➔ Harness

➔ How The Circuit Works

41-1 Air Suspension

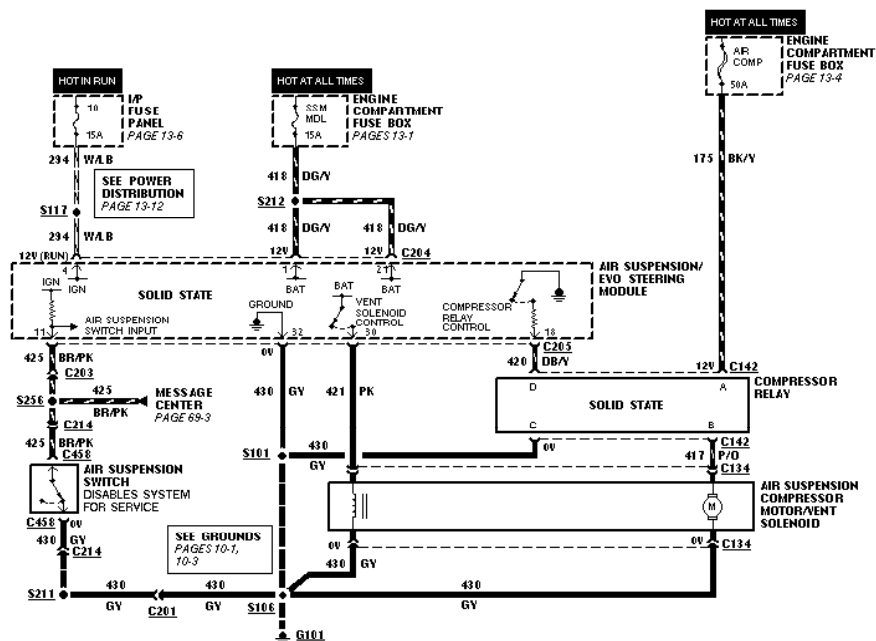

➔ Component

➔ Connector


➔ Ground

➔ Splice

➔ Page

➔ Harness

41-2 Air Suspension

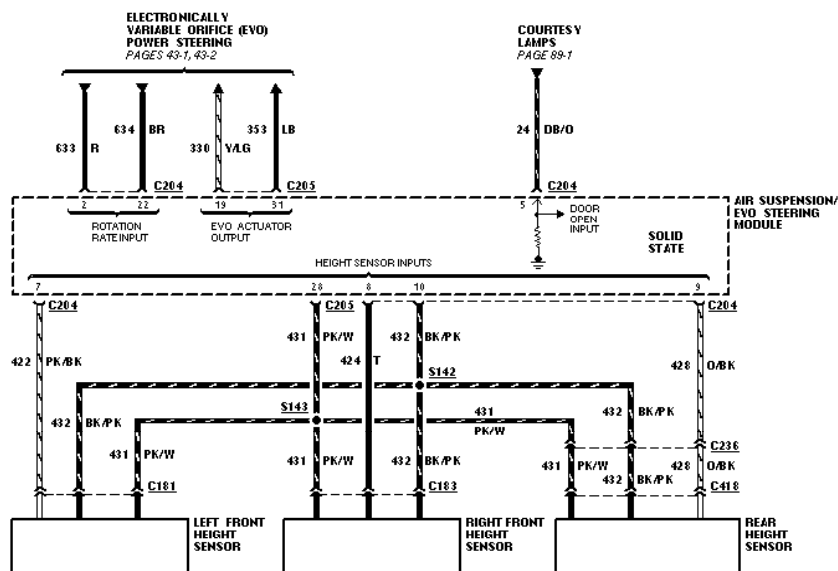

➔ Component


➔ Connector

➔ Splice

➔ Page

➔ Harness

41-3 Air Suspension

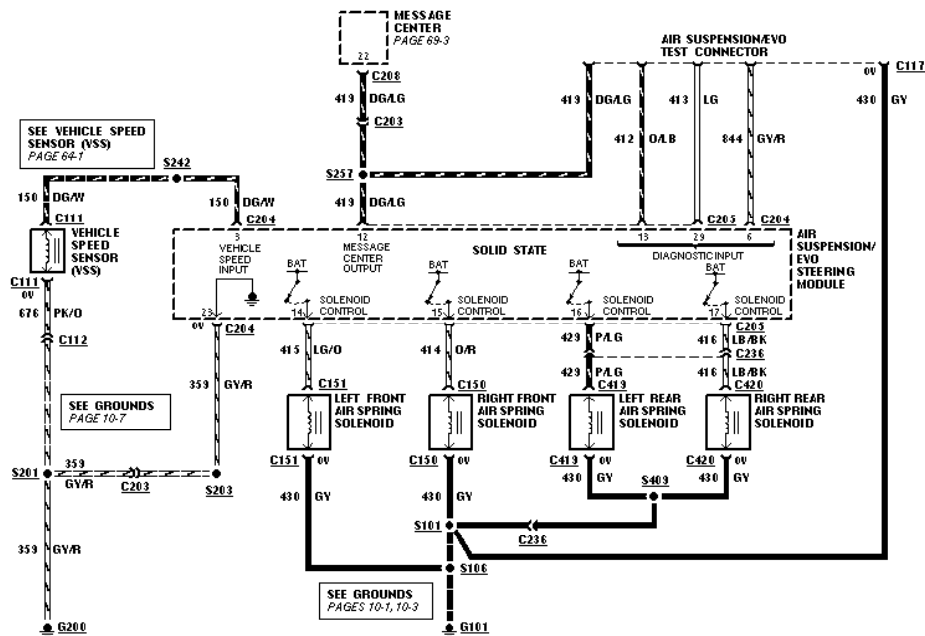

- ➔ Component
- ➔ Connector
- ➔ Ground
- ➔ Splice
- ➔ Page
- ➔ Harness

➔ How The Circuit Works