



Symptom Chart

Condition(s):

- ☐ EATC System Concern

Possible Source(s):

- EATC control module damaged or inoperative.
- A/C air temperature control door (19D842) damaged or inoperative.
- Sensor damaged or inoperative.

Action(s) to Take:

- Follow Diagnostics procedures and On-Board Diagnostics to register codes, then return to Symptom Chart for instructions.

- ☐ 01 (Code Displayed During Diagnostic Procedures)

Possible Source(s):

- Damaged control assembly.

Action(s) to Take:

- Replace EATC control assembly.

- ☐ 02 (Code Displayed During Diagnostic Procedures)

Possible Source(s):

- A/C air temperature control door damaged or inoperative.

Action(s) to Take:

- Refer to «[A/C Electronic Door Actuator Motor Diagnosis](#)» .

- ☐ 03 (Code Displayed During Diagnostic Procedures)

Possible Source(s):

- Automatic temperature control sensor open or short.

Action(s) to Take:

- Refer to «[Automatic Temperature Control Sensor](#)» Diagnosis.

- ☐ 04 (Code Displayed During Diagnosis Procedures)

Possible Source(s):

- A/C ambient air temperature sensor and bracket open or short.

Action(s) to Take:

- Refer to «[A/C Ambient Air Temperature Sensor](#)» Diagnosis.

- ☐ 05 (Code Displayed During Diagnosis Procedures)

Possible Source(s):

- A/C sunload sensor short.

Action(s) to Take:

- Refer to «[A/C Sunload Sensor](#)» Diagnosis.

- ☐ 888 (Code Displayed During Diagnosis Procedures)

Possible Source(s):

- Temperature control lockout valve and switch inoperative.
- Vacuum system inoperative.
- A/C clutch inoperative or damaged.

Action(s) to Take:

- Refer to [«EATC System Functional»](#) Test.
-